


applies to all utility/extension surfaces mounted on a lift and lock frame

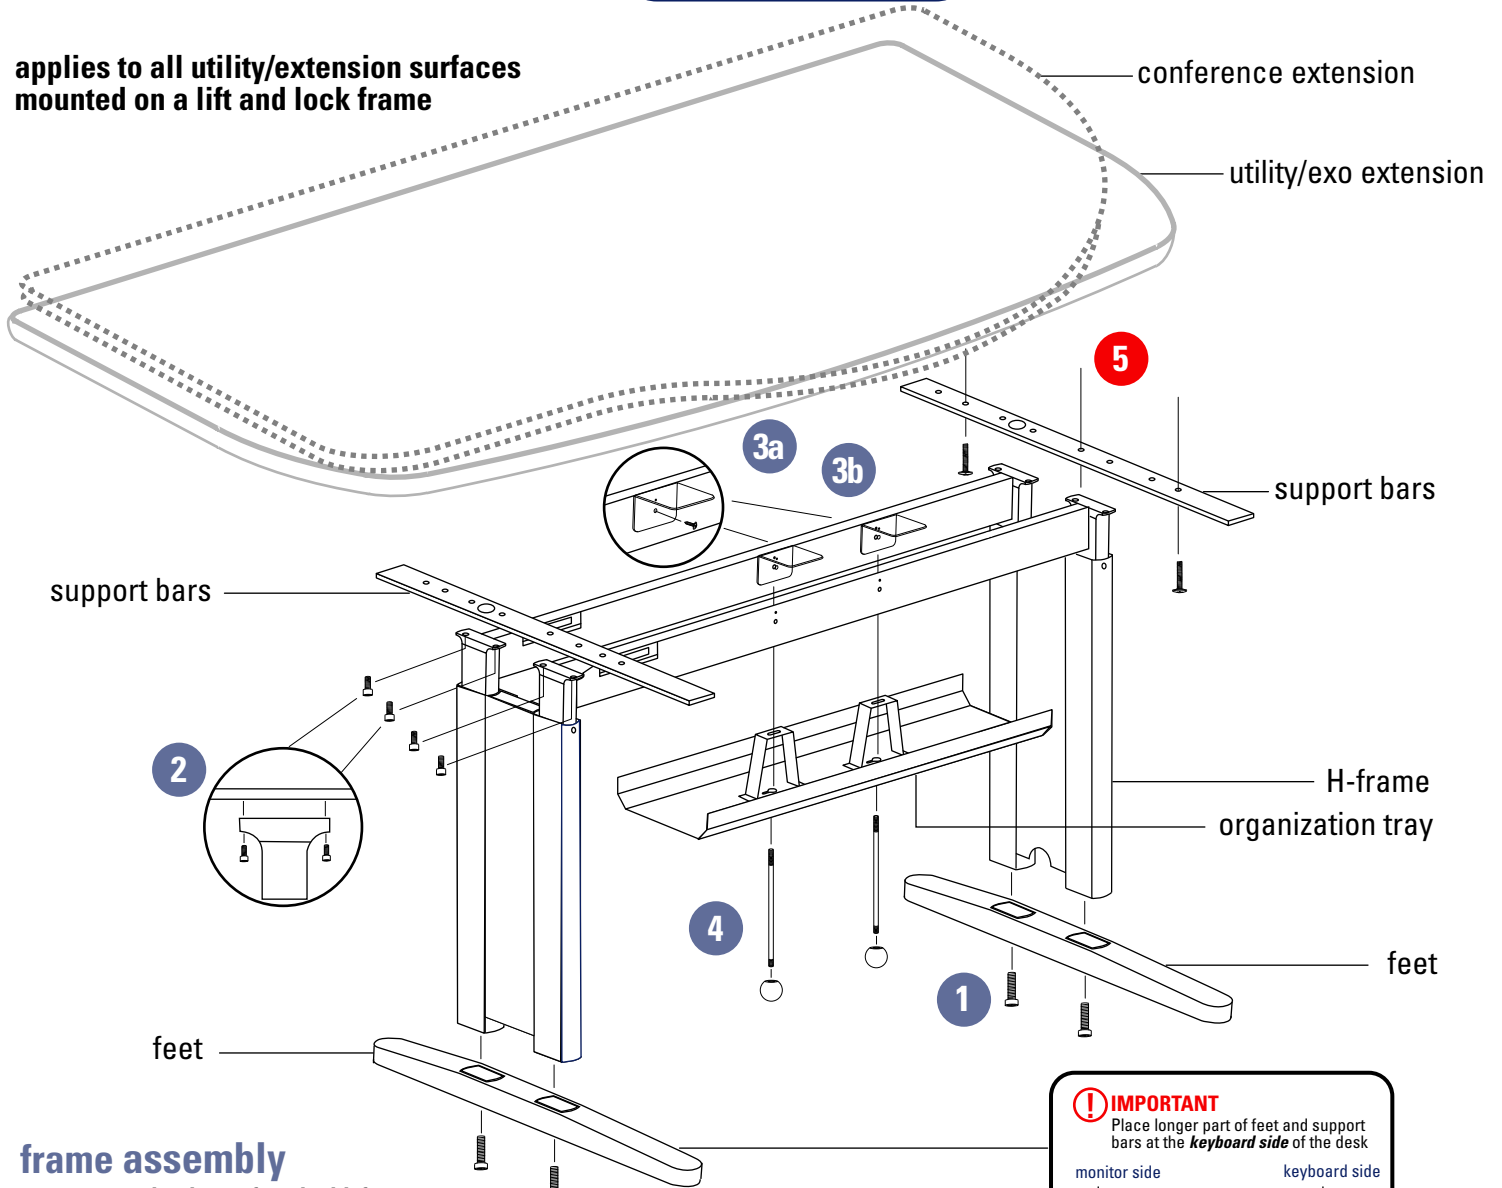

**frame assembly**

use hardware found with frame

**TOOL** A. allen wrench supplied w/frame

**1" black allen screw x 4** **1**  
use to attach 2 feet to H-frame with tool A

**3/4" silver allen screw x 8** **2**  
use to attach 2 support bars H-frame with tool A

**TOOL** B. philips screwdriver supplied by user

**large angle bracket x 2** **3a**  
attach to rear crossbar of H-frame using

**1/2" silver screw x 2** with user supplied screwdriver **3b**

**rod x 2 and plastic ball x 2** **4**  
use to attach organizer tray to large angle brackets

**! IMPORTANT**  
Place longer part of feet and support bars at the **keyboard side** of the desk

**top assembly**

**TOOL** screw gun w/philips bit

**3/4" screws x 6** **5**  
use to attach both surfaces to support bars. Drive into surface.

**GROUND SUPPORT EQUIPMENT (U.S.) Ltd.**  
11 Broadway, space 905, New York, NY 10004, U.S.A.  
Tel: 888 302 DESK. (212) 809-4323 Fax:(212) 809-4324.  
Email: [info@biomorphdesk.com](mailto:info@biomorphdesk.com)

You are hereby made aware that the content of any material submitted to you [upon your request] by Biomorph/Ground Support Equ. (US) Ltd. in connection with its furniture designs is considered proprietary to Biomorph/Ground Support Equ. (US) Ltd. and protected under federal copyright, trademark and patent laws, and under federal and state unfair competition law. Unauthorized copying, dissemination and/or use, both unintentional and intentional may subject you to payment of damages through legal action. © 2003 Biomorph/Ground Support Equ. (US) Ltd.